




Wilbert Memorials Sundial- design version 4 by Sundial Sculptures 3/3/17

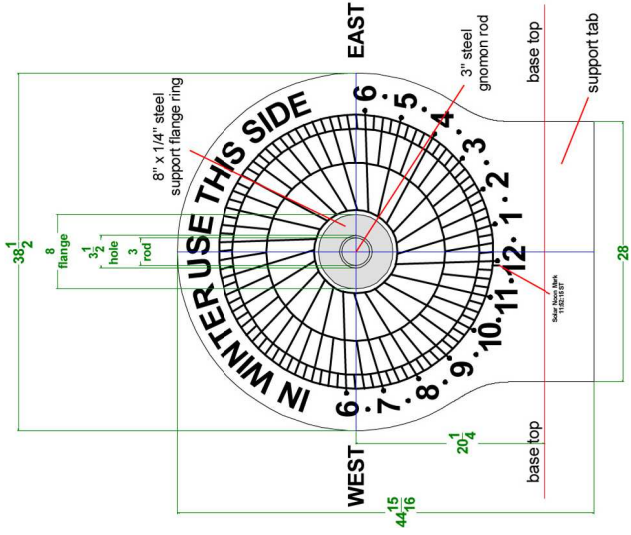

LOWER SOUTH FACE
shows Standard Time

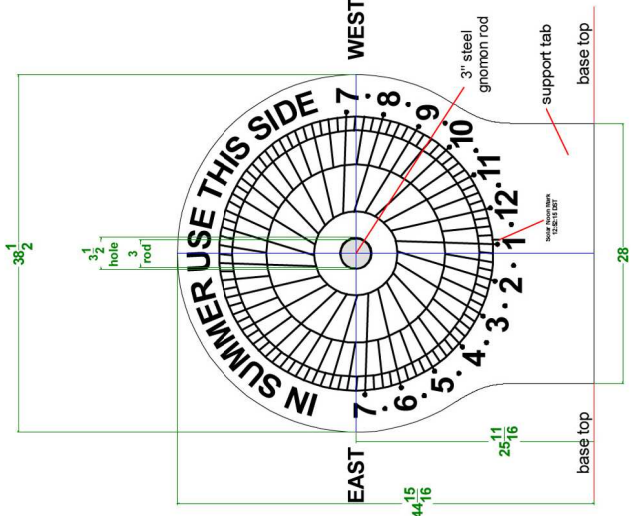

UPPER NORTH FACE
shows Daylight Saving Time

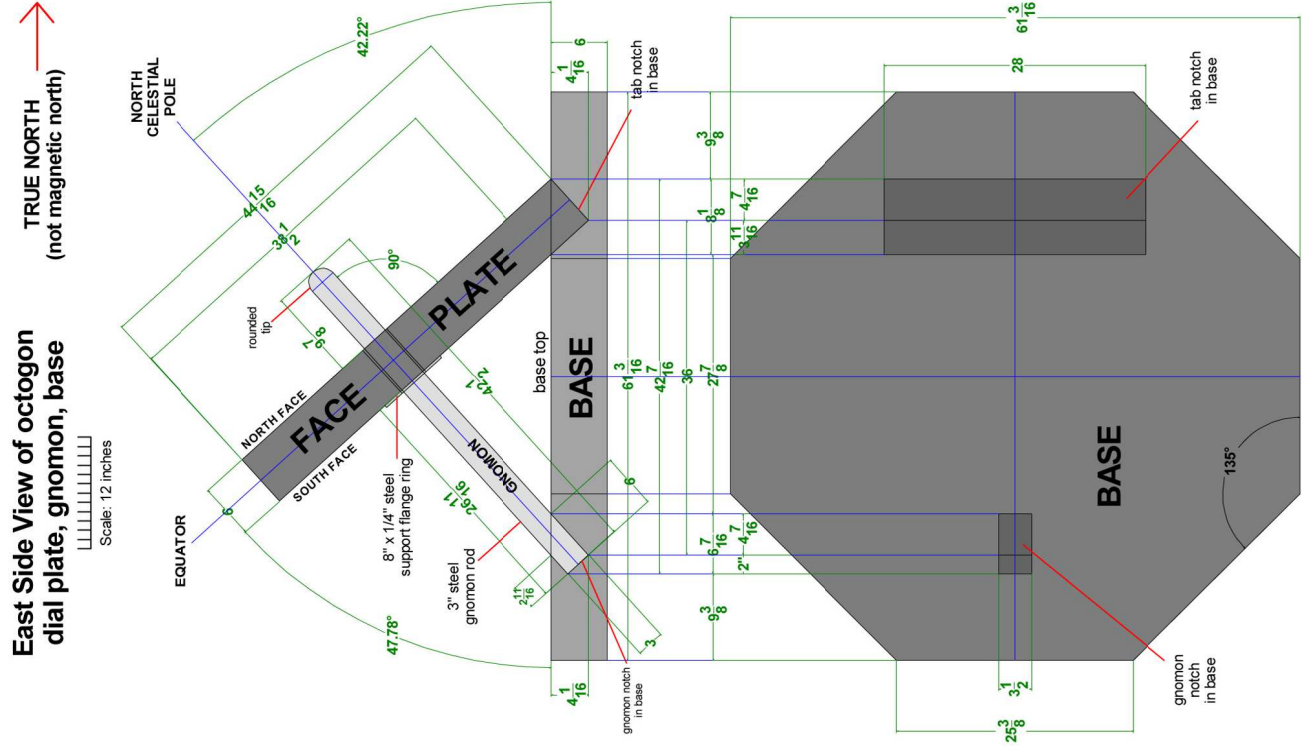

East Side View of octagonal dial plate, gnomon, base

Overhead View of Base & Notches

SUGGESTED INSTALLATION INSTRUCTIONS

1. Before installing sundial base, determine the direction of True North following instructions on pdf document we will supply you.
2. Lower base into place aligning it with True North. Shim base if necessary so that the top is perfectly horizontal in all directions.
3. Attach two crane lifting straps around each side of face tab for movement by crane to base. Don't place strap through hole.
4. Lower Face Plate's tab down close to, but not into the tab notch.
5. While still attached to the crane, slide gnomon rod into hole in south side of Face Plate until ring flange touches plate.
6. Insert small wood shims into gap between gnomon and the Face Plate hole walls so that the gnomon is in the exact center of the hole.
7. Make sure that the gnomon is at an exact 90° right angle to the north face!
8. Immediately before lowering Face Plate into notch, apply 1/16" thick coat of 100% silicone caulk to surface of tab notch. (optional)
9. Carefully lower Face Plate tab into base tab notch while guiding the lower end of the gnomon into its base gnomon notch.
10. After face plate and gnomon are in place and the structure is self supporting, remove crane straps.
11. Fill all gaps with silicone caulk where face tab and gnomon enter base. Also add caulk around gnomon hole in north face of stone.